

# Mounting instructions for the seesaw-ship „navis“

Item No. 512514401



*Diagram 1: Overall view of the play equipment*

# Mounting instructions for the seesaw-ship „navis“

Item No. 512514401

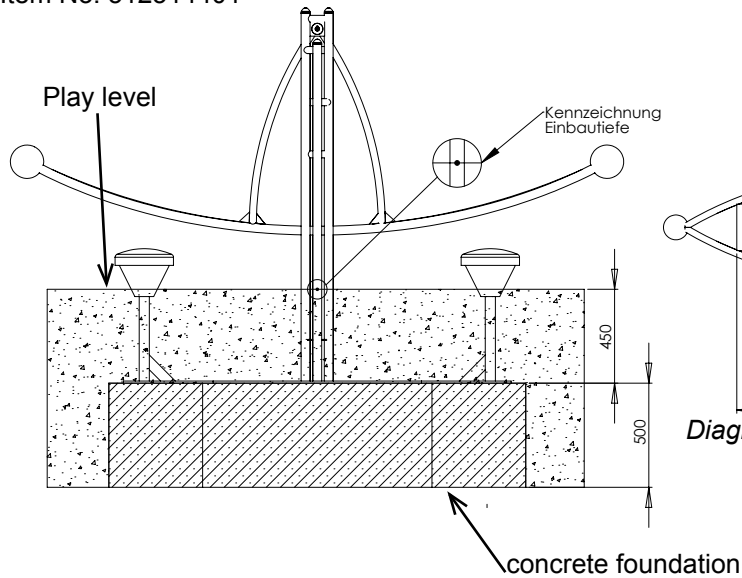


Diagram 2: Side view with dimension details „navis“

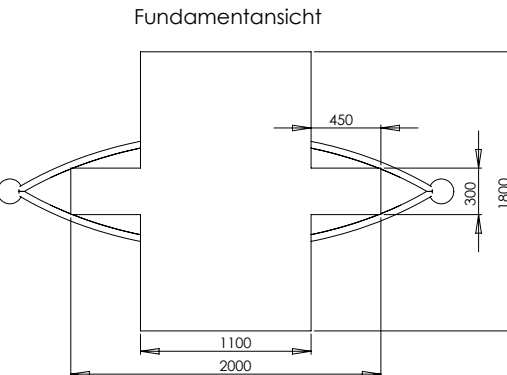


Diagram 3: Top view with measurements

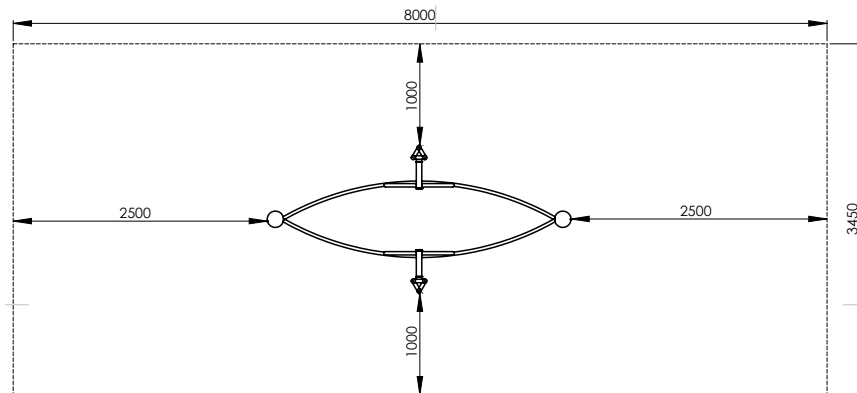


Diagram 4: Top view „navis“

1. Select the play equipment location in consideration of the required safety area (see Diagram 3: 8000 x 3450 mm).
2. The impact area of a playground equipment with an enforced movement is not allowed to overlap the impact area of other equipment. Regarding to DIN 1176 - 4.2.8.2.5, impact absorbing surfaces have to be put under the whole impact area of every equipment with an enforced movement.
3. Carry out excavation work for the foundation as shown in Diagram 2 and 3. After excavation, compress the foundation floor.  
**Note:** The seesaw is built in on the play level. Pay attention to items marked „game level“ of play equipment!
4. Set up 4 concrete foundations acc. to the dimensions indicated (LxWxH 1800 x 2000 x 500 mm) with central, horizontal reinforcement (BST 500 S) in the quality class C 20/25.

**Reinforcement plan:** Concrete foundation with reinforcement

Main foundation: BSt 500S

Ever 4 stirrups Ø 8 mm lengthwise and cross

Concrete cover  $h' = 3$  cm

Concrete quality class C 20/25

5. After a setting period of 10-14 days, depending on weather conditions and foundation size, clean the surface of the foundations. Place the base plates of the seesaw onto the foundations (as shown in the diagram) and screw it onto the foundation using the dowels M10 for heavy loads included in the delivery.

# Mounting instructions for the seesaw-ship „navis“

Item No. 512514401

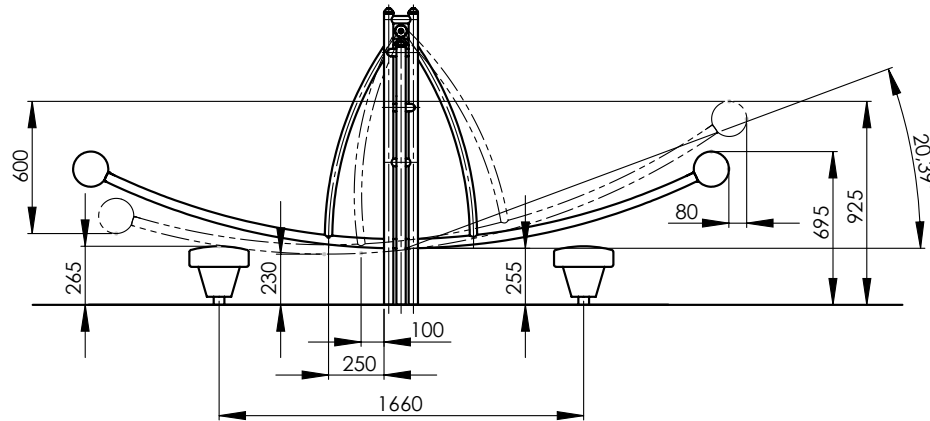


Diagram 5: maximum deflexion „navis“ with seesaw softener

6. Seal the foundation with the safety cover required for the height of fall indicated. Set up impact-absorbing playground surfacing according to EN 1177 HIC 1000.

**Critical drop height  $\leq 1000$  mm**

Recommended surface material: sand, bark mulch, gravel, synth. fall protection

7. Do not allow children to use the equipment before the installation has been finished.

**Attention:** If the play equipment has been incompletely installed or partly dismantled when carrying out maintenance and repair work, this may lead to particular risks of injury for the user. For this reason, make clearly visible that the equipment shall not be used in such cases.

**NOTE:** Play equipment, which contain components made of stainless steel should not come with „normal“ steel parts in contact. Of these steel parts may rub off and leave small steel particles in combination with moisture brown rust stains. If such corrosion occur on stainless steel parts, they are fine with an abrasive (240 grit) to remove. Please take care when transporting and setting up the fact that the components are made of stainless steel with no „normal“ steel parts in contact.

In order to preserve a good visual appearance of your stilum playground equipment over a long period one should take care of maintenance of the stainless

# Mounting instructions for the seesaw-ship „navis“

Item No. 512514401

surface even despite of their corrosion resistance.

Especially areas, which can not be reached by rainfall should be frequently cleaned from dirt and deposits due to air pollution and dirt caused by the atmosphere.

Light soiling can easily be removed by using a high pressure cleaner.

For persistent deposits use a clean cloth moistened with a special liquid cleaner (e.g. on phosphoric acid) and rinse off with clear water after a short application time. During cleaning with mild abrasive components, only wipe over stainless steel surface in polishing direction.

For heavily soiled surfaces, polishes can be used (e.g. for cleaning chrome on cars) or for greasy and oily dirt alcoholic cleaning agents and solvents (e.g. ethyl alcohol, isopropyl alcohol or acetone).

However, it should be noted that the dissolved soiling is not spread over the surface again.

Do not use any chlorid or hydrochloric containing cleaning products nor scouring powder, bleaching - or silver polish cleaner. Cleaning intervals depend on type and degree of soiling as well as on demands made on optical characteristics. Therefore cleaning is advisable at intervals of six to twelve months – whereby in the case of strong soiling it is appropriate to clean the playground equipment at intervals of 3 to six months.